



# Attaching a sensor head

How to attach a sensor head to Aeroqual Ranger.

Written By: Margaret Grattan



## Step 1 — Attach a sensor head



- ① Ranger may be left turned ON or OFF for this operation
- Press the sensor head into the Ranger monitor base until you hear a click

## Step 2 — Detach a sensor head



- i** Ranger may be left turned ON or OFF for this operation
- Hold the Ranger monitor base in one hand
  - Grab the sensor head with the other hand
  - Firmly pull the sensor head apart from the Ranger monitor base

For further support, contact Aeroqual Support.