


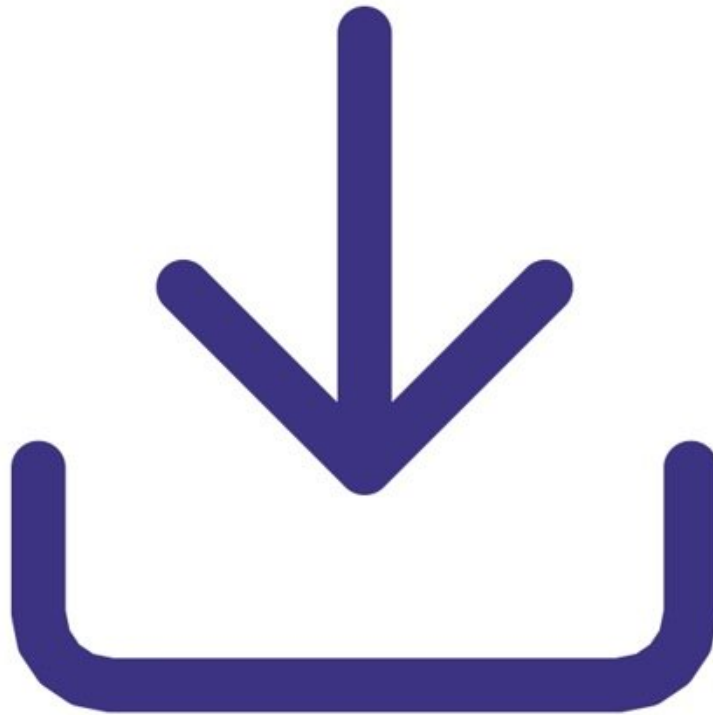

Connect sensor head

Written By: StJohn Vuetilovoni



INTRODUCTION

You can only connect one gas or particulate sensor head at a time to monitor. However, you are able to [connect the optional temperature and humidity sensor](#) at the same time as a gas or particulate sensor head.

Step 1 — Attach sensor head




⚠ Never attach the sensor head while the monitor is switched on as that can damage the monitor.

- Make sure the monitor is turned off.
- Keeping the the sensor head perpendicular, carefully insert the keyed connector at the base of the sensor head into the top of the monitor.
- To avoid damage to the sensor, never shake or invert the monitor when a sensor is attached.
- When the sensor is fully inserted, [turn on the monitor](#).

Step 2 — Remove sensor head



- Turn the monitor off by pressing and holding the **POWER** button for 2 seconds until the monitor beeps.
- When the display turns blank and the monitor stops operating, carefully detach the keyed connector at the base of the sensor head from the monitor.

 If you remove the sensor head while the monitor is switched on and without AC/DC adapter connected, the monitor automatically shuts down.

For further support, contact [Technical Support](#).