


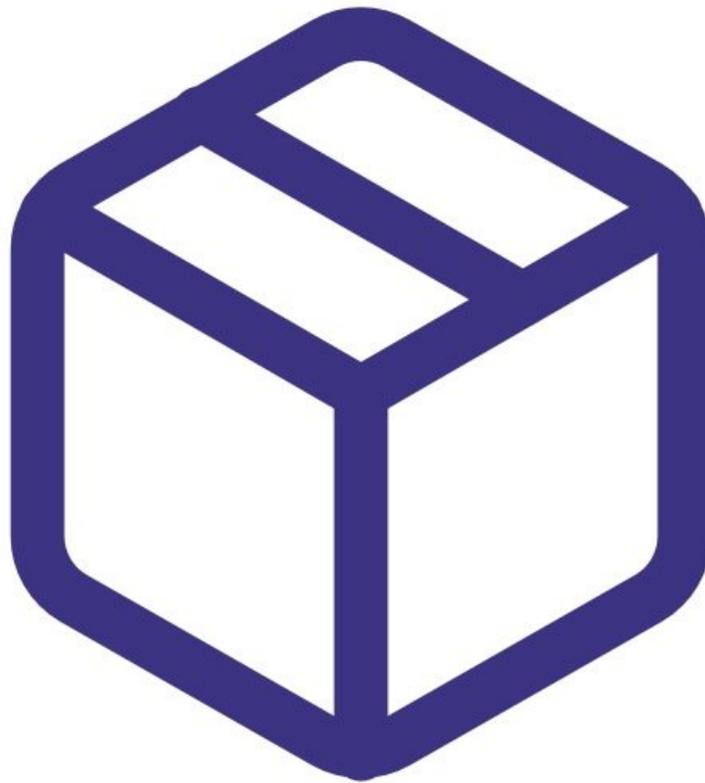


Re-pack AQM

Written By: Tanya Taylor



Step 1 — Prepare AQM and crate

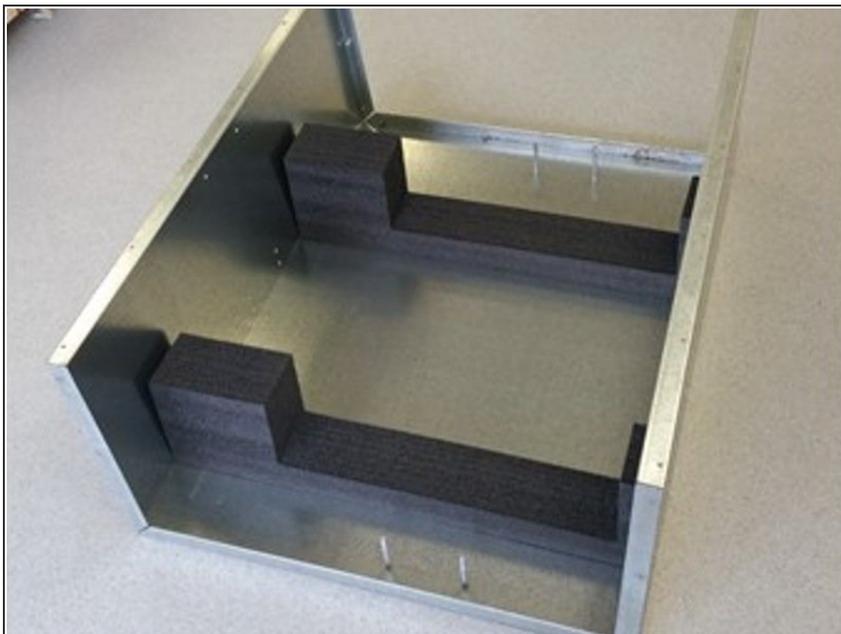

- Remove the gas inlet, particle monitor inlet and any third-party sensor from your AQM 65.
- Insert two of the foam cross-bracing pads into the crate.

Step 2 — Position AQM



- Carefully position the AQM 65 into the crate so the two supporting bolts at the end of the crate go through the AQM's mounting brackets.

Step 3 — Finish bracing



- Insert the remaining cross-bracing pads to stabilize the packing and prevent movement during transport.
- Screw the case together with M4 Philips head screws.
- You're now ready to transport your AQM 65.

For further support, contact [Technical Support](#).